

Quick guide temperature switch WTR 620

Safety instructions !!!

Intended product use

- The sensor has been manufactured exclusively for the intended use described here or in the data sheet and may only be used in this way.
- The technical specifications in these operating instructions must be observed.
- Improper handling or operation of the device outside of the technical specifications requires immediate shutdown and inspection by promesstec.
- If the unit is transported from a cold to a warm environment, condensation may cause the unit to malfunction.
- Before using the appliance again, wait until the temperature of the appliance has adjusted to the room temperature.

Claims of any kind are excluded due to improper use!!!

Personnel qualification

Improper handling of the sensor can lead to considerable personal injury and damage to property. The activities described in this operating manual may only be carried out by qualified personnel with the appropriate qualifications. For installation and commissioning of the sensor, the relevant country-specific guidelines and standards must be observed. Especially during installation, depending on the application, contact with aggressive media may occur. The safety measures must be observed. Electrical installation and commissioning may only be carried out by qualified and trained personnel.

Special dangers



Residues of measuring materials in dismantled devices can endanger persons, the environment and equipment. Sufficient precautionary measures must be taken. The units must not be used in safety or emergency stop installations. Incorrect use or operation of the unit can lead to injuries. At Depending on the application, aggressive media with extreme temperatures and high temperatures and high pressure or vacuum may be present. We recommend installing and dismantling of the unit only at ambient temperature and in a depressurised state.

Dangers when operating the appliance

Our units have a very high protection class when properly assembled and installed. When cleaning your unit with high-pressure cleaners, steam cleaners, etc., make sure that neither the cover nor the cable gland or M12 connector are directly exposed to the pressure jet. If the temperature falls below the dew point, condensation may form in the connection compartment of the unit. In such extreme applications, contact our sales and technical support before commissioning.


Temperature measurement technology

Connection WTR 620

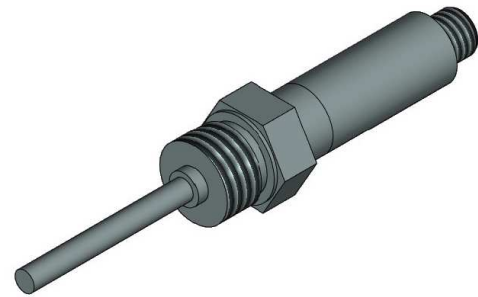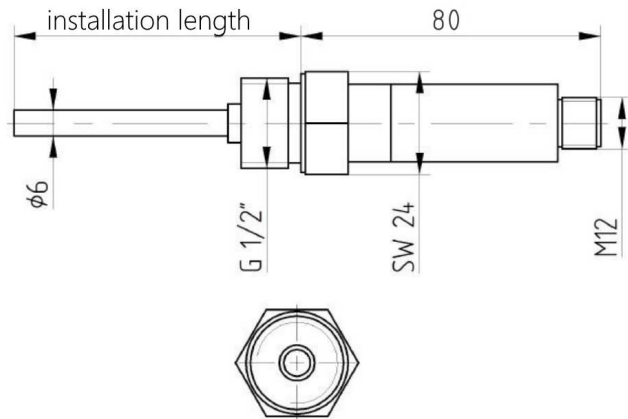

Mechanical structure

Electrical connection WTR 620

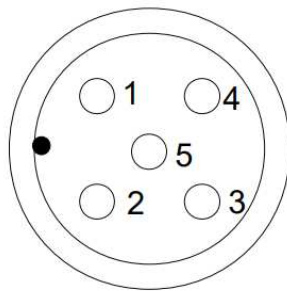

- 1: + Power supply
- 2: Output PNP
- 3: - Power supply
- 4: Interface RS485 (A)
- 5: Interface RS485 (B)

Technical specification WTR 620

Operating voltage	UB = 8...30 V DC
Current requirement	15 mA + output PNP
Switch-on delay	<0.3s
Measured value recording	PT100 class A
Measuring range	-50°C to +150°C
Measurement deviation (accuracy)	< ±0.1% of final value
Output	PNP, (active max. 60 mA, short-circuit proof)
Control behaviour	two-point controller
Factory setting of switching point	50°C
Factory setting hysteresis	1°C
Protection class	IP69K according to DIN 60529
Electrical connection	M12 5-pole
Interface	RS485 Modbus protocol for configuration as well as readout of the measurement results and statuses
Process connection	G ½
Width across flats	24
Tightening torque	5..10 Nm
Material Protection tube	Stainless steel 1.4571 (V4A)
Diameter	6 mm
Storage temperature	-20 to 60 °C
Process pressure/operating pressure	max. 10 bar
Humidity	0...95 % r. h.
Weight approx.	150 g


Temperature measurement technology

Configuration WTR 620


The WTR 620 has an RS485 interface and works with the Modbus RTU protocol. The interface can be used to read out the measured values and the status as well as to carry out the configuration. The switching point, the hysteresis, the output logic and the Modbus ID can be configured. The temperature switch has the address "1" as standard and can be configured by a Modbus master. It is also possible to configure the WTR 620 using the in-house Windows software "pmtKonfigTool". An RS485 to USB programming adapter is required for this.

The register table, designations and explanations are stored in the data sheet of the WTR 620. A detailed explanation of the configuration can be found in the instructions.

Configuration via Modbus Master

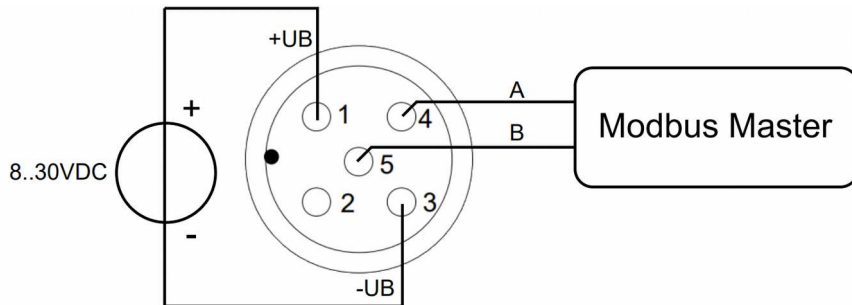

Configuration via Windows software

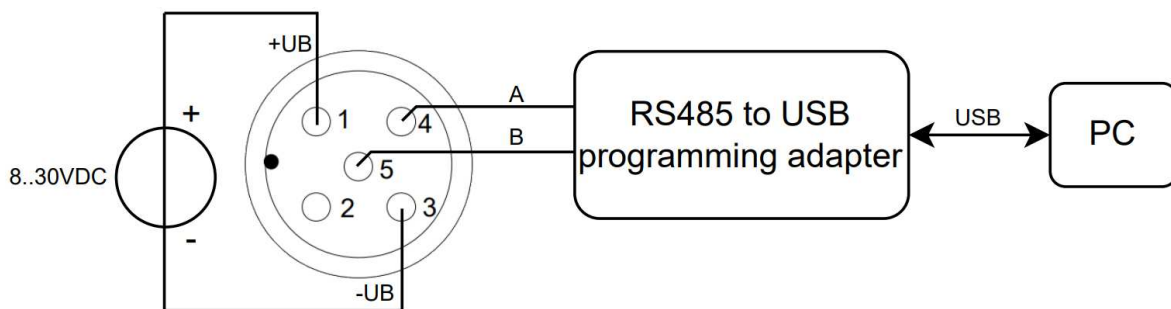

Temperature measurement technology

Assembly instructions !!!

Mechanical installation

- Only use the welding sockets and process connections from promesstec for the adaptation in your process. This is the only way we can guarantee you an optimum measuring point.
- After installing the sensor, check the tightness of the measuring point.

Electrical assembly

- Install the sensor in your process before the electrical assembly. In this way you avoid winding up the cable when mounting the measuring point.
- M12 plug: Screw the M12 socket by hand onto the plug on the promesstec sensor. Mounting is done without tools.
- When installing the connection cable, ensure that both components are firmly and positively connected. The permissible tightening torque can be found in the data sheet of the data sheet of the respective connection cable

Important notes !!!

Return and repair

The promesstec sensors have a modular design. This allows us to carry out repairs and overhauls of defective devices. To do this, send the device to promesstec. You will find a return form with the details to be provided on our homepage under "Technical information".

Disposal of the units

Dispose of units, components and packaging in an environmentally friendly manner in accordance with the waste treatment and disposal regulations typical for the country. Pay attention to waste separation and recycling of high-quality materials such as stainless steel, etc.

Further documentation

These operating instructions and the data sheets can be found as a file on our homepage under the homepage under the respective units. The documentation is available in both and in English. Other languages are available on request. Additional information such as characteristic curves of temperature sensors etc. can be found on our homepage under



www.promesstec.de

version 2.2.1 page 4/4